


BOMANN®

HOUSEHOLD- BUILT-IN OVEN EBO 7900 IX

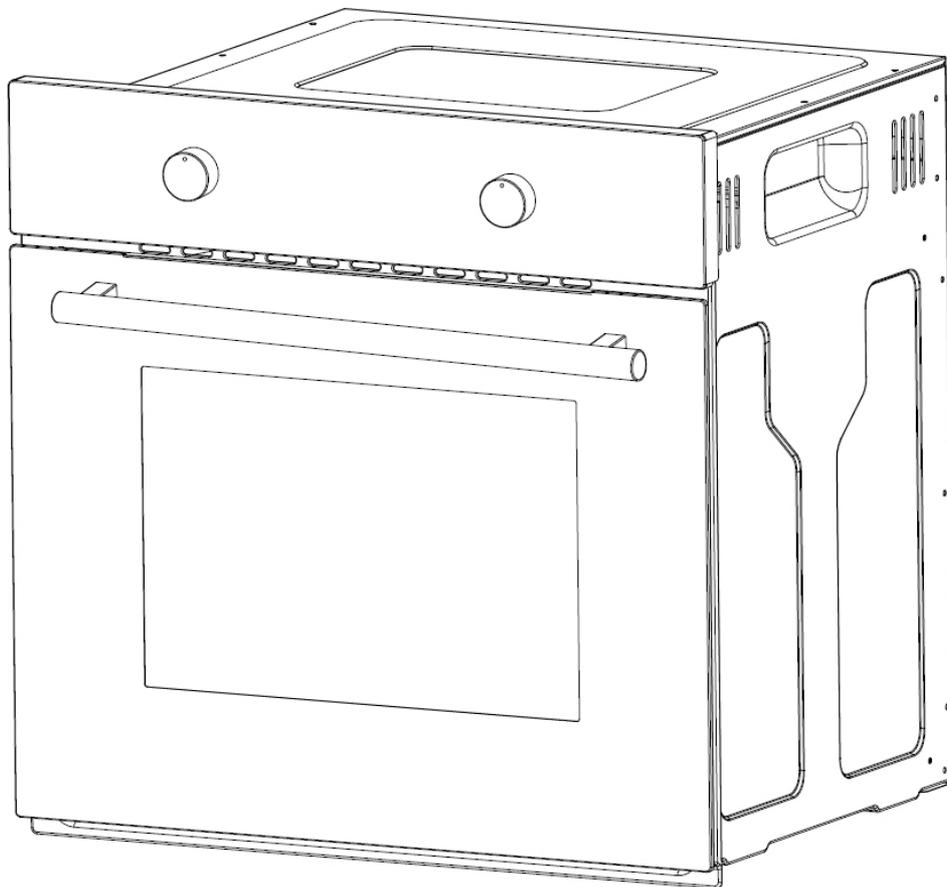

CE

Instruction Manual

Contents

Introduction	Page 3
General Notes	Page 3
Special safety Information for this Unit	Page 3
Unpacking the Appliance	Page 5
Appliance Equipment	Page 5
Installation	Page 6
Startup / Operation	Page 7
Cleaning and Maintenance	Page 9
Troubleshooting	Page 10
Technical Data	Page 10
Disposal	Page 10
EU Product data sheet	Page 12

Introduction

Thank you for choosing our product. We hope you will enjoy using the appliance.

Symbols in these Instructions for Use

Important information for your safety is specially marked. It is essential to comply with these instructions to avoid accidents and prevent damage:

 **WARNING:**

This warns you of dangers to your health and indicates possible injury risks.

 **CAUTION:**

This refers to possible hazards to the machine or other objects.

 **NOTE:** This highlights tips and information.

General Notes

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty and the receipt. If you give this device to other people, also pass on the operating instructions.

 **NOTE:**

Illustrations can deviate from the original appliance.

- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use.
- The appliance is only to be used as described in the user manual. Do not use the appliance for any other purpose. Any other use is not intended and can result in damages or personal injuries.
- Operate the appliance only **properly installed**.
- Do not use it outdoors. Keep it away from sources of heat, direct sunlight and humidity.
- Do not operate the appliance **without** supervision.
- When not in use, for cleaning, user maintenance works or with disruption, switch off the appliance and disconnect the plug (pull the plug itself, not the lead) or turn off the fuse.
- The appliance and if possible the mains lead have to be checked regularly for signs of damage. If damage is found the appliance must not be used.
- For safety reasons, alterations or modifications of the appliance are prohibited.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

 **WARNING:**

Do not allow small children to play with the foil. There is a **danger of suffocation!**

Special safety information for this Unit

 **WARNING: Danger from electrical current! Contact with live leads or components can be fatal!**

- The connection of the appliance must satisfy the relevant standards and regulations and may only be performed by an authorized specialist.
- Make sure that the appliance is turned off from the power supply (fuse) before changing the bulb in the oven.

- The use of high-pressure cleaners or steam cleaners is prohibited. Ingress of liquids can lead to electric shock. Put the appliance never under water.



WARNING: Hot surface! Risk of Burning!

- During operation the appliance and its accessible parts become hot. Special care must be taken to avoid touching heating elements. Children younger than 8 years must be kept away from the appliance.
- Grasp the oven only on the door handle and switches. Use potholders if you want to remove or insert the accessories.
- Let the appliance cool down before cleaning or maintenance.



WARNING: Risk of Fire!

- Unattended cooking on cooking hobs with fats or oil can be dangerous and can be cause fires. NEVER attempt to extinguish a fire with water but turn the unit off and then cover the flames e.g. with a lid or a plate.
- CAUTION: The cooking process must be observed. A short cooking operation is to be observed continuously.
- The appliance is not intended for operation with an external timer or external remote-control system.
- Make sure that with installing adequate air circulations ensured and the ventilation slots are not blocked.
- Never pour liquids into a hot oven! Scalding by rising water vapor as well as possible damage to enamel.
- Do not place any objects on the open appliance door.
- Do not store any cleaning agents or flammable materials in the appliance or in the immediate vicinity.

- This appliance can be used by **children** aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning **use of the appliance** in a safe way and understand the hazards involved.
- **Children** shall not play with the appliance.
- Cleaning and **user maintenance** shall not be made by **children**, unless they are older than 8 years and are supervised.
- Do not use harsh abrasive cleaners or sharp metal objects for cleaning the glass surface. The glass can be scratched or destroyed.
- Do not try to repair the appliance on your own. Always contact an authorized technician. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.

Unpacking the Appliance


- Remove the appliance from its packaging.
- Remove all packaging material, such as foils, filler and cardboard packaging.
- To prevent hazards, check the appliance for any transport damage.
- In case of damage, do not put the appliance into operation. Contact your distributor.

i NOTE:

Production residue or dust may have collected on the appliance. We recommend cleaning the appliance according to chapter "Cleaning and Maintenance".

Appliance Equipment

Appliance Overview

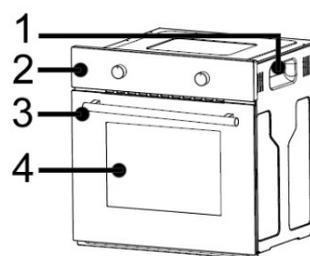

- 1 Recessed grips
- 2 Control panel
- 3 Unit door
- 4 Oven with accessories

Delivery scope

1x oven tray, 1x grill grid, installation material

Installation

⚠ WARNING:

The installation and the connection to the main power may only be performed by an authorized specialist.

⚠ CAUTION:

- The cabinet, veneers, plastic coatings, used adhesives etc. must be sufficient heat-resistant.
- The appliance must be installed so that heat can be dissipated. The ventilation openings must not be blocked.
- Do not mount any heat protection strips in order to ensure an adequate supply of cooling air.
- Keep a sufficient distance from the rear of the unit for air circulation.


ℹ NOTE: Recommendation!

- When installing, ask another person to assist.
- Wear protective gloves to avoid injuries at possible sharp edges.
- When carrying the appliance use the grips at the housing sides.

Cabinet opening and unit dimension

Prepare the cabinet opening according to the dimensional drawings.


Dimension in mm

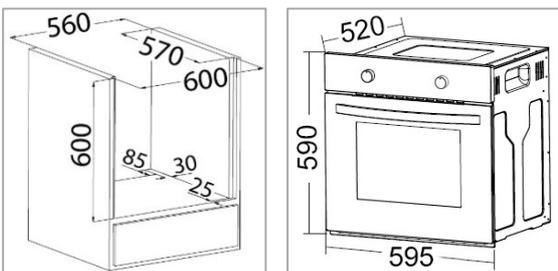

Installing the oven

- Put the appliance with the connecting cable first into the prepared cabinet a bit.
- Do the connection to the mains supply, see "Electrical connection".

- Insert the oven into the cabinet opening completely. Make sure that the cables does not restricted (bent, squeezed or twisted).
- Attach and secure the oven by using the supplied screws on the side walls of the cabinet. The provided mounting holes (A) are visible after opening the oven door on the left and right frame.

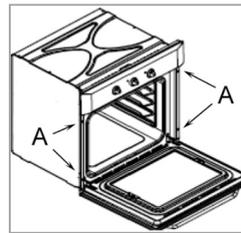

Electrical connection

Information for the authorized expert

⚠ WARNING:

- The installation to the mains supply must conform to the local standards and regulations.
- Improper connection may cause to an **electric shock!**
- Do not change the appliance plug! Let replace the mains plug by a specialist if this is not suitable for the appliance plug.
- Do not use multiple sockets or extension cords.
- Before connecting, ensure that the power supply corresponds with the information on the rating label (unit cabinet frame).
- Connect the mains cable to a properly installed and earthed wall outlet.
- Arrange the mains cable in such a way that it does not get in contact with any hot components of the appliance. Do not lead it over sharp edges or corners.
- If the plug after installation is not accessible, a corresponding disconnect device must be available to meet the relevant safety regulations.

Startup / Operation


Before initial use

- Clean the oven interior with all therein located accessories. Follow the instructions that we give you in the chapter "Cleaning and Maintenance".
- In order to burn any manufacturing residue, heat the closed oven for approx. 30 minutes at 250°C. Use the heating function [Upper/lower heating].

i NOTE:

The occurring odor and possibly a slight smoke development cannot be avoided. Therefore ensure for a good ventilation of the room during heating.

Operation

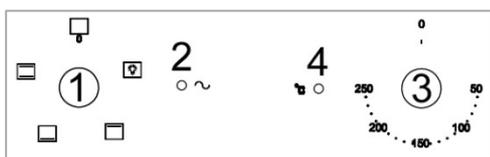

1 Oven function selector switch

The function selector switch is used to set the type of heating. Rotate the function selector switch until the icon for the desired type of heating points upwards.

2 Power control lamp

The control lamp indicates the oven operation.

3 Oven temperature selector switch

△ CAUTION:

Turn the temperature selector switch only clockwise and back again. Otherwise the switch will be damaged.

The temperature selector switch is used to adjust the oven temperature. The thermostat allows the temperature setting from 50°C to 250°C.

4 Oven temperature control lamp

The temperature control lamp indicates the heating operation. If the lamp goes off, the set oven temperature is reached.

During operation, the oven must continuously reheat to keep the temperature stable. When reheating the control lamp is lighting (thermostat function).

i NOTE:

If the recipe recommends putting the food in the pre-heated oven only, this should not be done before the control lamp turns off for the first time.

Oven lighting

The oven lighting automatically turns on as soon as the oven is in operation. However, if the oven is not in use, the oven lighting can be turned on separately via the function selector switch.

Using the accessory

△ CAUTION:

Always insert the accessory completely into the oven; otherwise the glass door can be scratched.

Inside the oven are levels for inserting the accessories. The accessories are safely used between the side levels.

Switching on and off

The oven is equipped with various functions. Baking can be done with upper- and lower- heat. Set the required operating conditions.

- Set the oven function selector switch to the appropriate position.
- Turn the oven temperature selector switch clockwise to the desired temperature.
- To switch the oven off, both switches must be turned to the off-position again.

Oven functions

Symbol	Description
0	Off-Position: Switching the oven off.
	Oven lamp: The oven lighting can be turned on independently of the oven operation, e.g. for cleaning the oven chamber.
	Upper heating: The heating is done with active top heat. The dish gets heated from the top. Use when re-baking from above or for keeping warm
	Lower heating: The heating is done with active bottom heat. The dish gets heated from the bottom. Use when re-baking from below.
	Upper/lower heating: The heating is done in a conventional manner. The dish gets evenly heated from the top and bottom. Suitable for baking on one level.

Notes for baking and cooking in the oven

i NOTE:

- Use the included accessory.
- In principle, you may use any heat-resistant cookware for your food.
- Unsuitable is cookware of bright, shiny aluminum, unglazed clay and tableware made of plastic or with plastic handles.
- Follow the instructions for the duration of the completion in your recipes and preparation instructions on the product packaging.

Baking

- For good baking results, preheating is recommended up to the desired temperature.
- After finishing the baking process, we recommend resting the food for about 5 minutes in the oven.
- Before removing the cake, check if it is done by using a wooden stick. When the cake is done, no dough residue will stick to the wooden stick.

Cooking and roasting meat & fish

- Only cook meat of maximum 1 kg in the oven. We recommend roasting or cooking smaller portions on the cooking hob.
- When using the grill grid for roasting, we recommend placing a baking sheet with some water on the lower level.
- At least once after half of the cooking time, the roast should be reversed; sprinkle the roast during cooking now and then with the resulted roast liquid or with hot, salty water, thereby not using cold water.

Energy saving tips

- Only preheat if it is specified in the recipe.
- Use dark, black painted or enameled tins. They absorb the heat particularly well.
- Open the oven door as less as possible during operation.
- Use the residual heat after cooking process. Switch the oven off a few minutes before ending the cooking / baking time. So your baking product even cooked in the stored oven heat.

Information to reduce the environmental effect of cooking (acc. VO (EU) No. 66/2014 appendix I, No. 2)

- We recommend the use of dark baking molds and plates, because they conduct the heat better.
- Any unnecessary accessories should be removed from the baking chamber before using the appliance.
- During cooking, the oven door should remain closed to avoid unnecessary heat loss.
- Only preheat the oven if required by the recipe.
- If a selection of cooking time is specified, always use the lowest recommended temperature.
- Use the residual heat by switching back to minimum temperature shortly before the end of the cooking time.

- Save electricity! If you do not need the oven, switch off functions such as interior lighting, program, temperature
- Clean the oven after each application, to keep the cleaning effort as low as possible. We recommend the use of biological cleaners.

Cleaning and Maintenance

WARNING:

- Always switch off the appliance completely and where required, disconnect the plug or turn off / unscrew the fuse before cleaning and user maintenance.
- Allow the appliance to cool down before cleaning.
- Do not use steam cleaners for cleaning the appliance; moisture could enter electrical components.
Risk of electric shock! Hot steam could damage the plastic parts.
- Never use flammable substances, such as thinner, kerosene, gasoline or acids for cleaning.
- The unit must be dry before restarting operation.


CAUTION:

- Do not use a wire brush or other sharp, abrasive items.
- Do not use harsh abrasive cleaners or sharp metal objects for cleaning the glass surface. The surfaces can be scratched or destroyed.
- Always consider the application and safety notes of the detergent.

Removing the oven door

You may remove the oven door to facilitate cleaning and to get better access to the oven interior.

- Open the appliance door completely.
- Fold up the retaining brackets (a) of the hinges on both sides.
- Slightly close the door and lift it up to remove it.

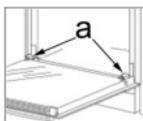

- When reinstalling the door, make sure the notch of the hinge is properly aligned with the protrusion of the hinge holder.
- **Then press down the retaining brackets (a) again,** otherwise the hinges could get damaged when closing the oven door.

Cleaning the oven

NOTE:


By cleaning after each use, you avoid that food residues and soiling will be burning-in at the next operation. Then the cleaning is only possible with a lot of effort.

- Clean the appliance and accessories depending on the soiling degree and depending on the surface only with a soft, damp cloth and commercially, food safe cleaners.
- Soak heavily soiled areas with some warm soapy water or a vinegar cleaner.
- Wipe off grease residues from the sealing framed the cooking chamber.
- Use a soft absorbent cloth for drying after cleaning.

Cleaning the glass panel

If necessary, clean the inside of the glass panel.

- Open the appliance door.
- Remove the retaining strip by loosening the screws laterally of the strip.
- Take off the glass carefully forward.
- Replace the glass panel and affix the retaining strip; after you've cleaned the glass and dried it thoroughly.

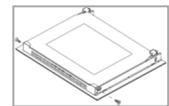

Reverse the bulb

WARNING:

- Make sure that the appliance is turned off from the power supply (fuse).
- Allow the lamp to cool down before replacing the bulb. **There is risk of burns!**

NOTE:

Use the correct bulb, heat resistant up to 300°C:

1 x 25 W, 220-240 V~

- Unscrew the lamp cover, clean it with a dry cloth.
- Change the bulb.
- Reattach the lamp cover and check the functionality.

Troubleshooting

Before you contact an authorized specialist

Problem	Possible causes	What to do
Unit does not work	The power supply is disconnected.	Check the fuse of your domestic wiring system.
Oven lamp does not work	Bulb is defective, has been inserted incorrectly or not firmly.	Check the bulb, see "Reverse the bulb".
Strong formation of smoke	Grease residue in the oven.	Switch off the oven and allow to cool down before cleaning.

NOTE:

If a problem persists after following the steps above, contact your distributor or an authorized technician.

Technical Data

Electrical connection.....

Connection voltage:220-240 V~ / 50/60 Hz

Connection power:2350 W

Fuse protection:16 A

Protection class:I

Dimension H x W x D / Weight.....

Oven:59.0 x 59.5 x 52.0 cm

Cabinet cutout:60.0 x 56.0 x 57.0 cm

Net weight:26.0 kg

The right to make technical and design modifications during continuous product development remains reserved.



Disposal

Meaning of the "Dustbin" Symbol

Protect our environment; do not dispose of electrical equipment in the domestic waste.

Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.

This helps avoid the potential effects of incorrect disposal on the environment and human health.

This will contribute to the recycling and other forms of reutilization of electrical and electronic equipment.

Information concerning where these can be disposed of can be obtained from your local authority.

WARNING:

Remove or disable any existing snap and bolt locks, if you take the unit out of operation or dispose it.

**Information to professional users for disassembly
(acc. VO (EU) No. 66/2014 appendix I, No. 2)**

*Information for non-destructive disassembly for
maintenance purposes*

- Remove the lamp as described in the manual.
- For maintenance purposes, the oven door can be unhinged out and reinstalled, for the procedure please refer to the manual.
- A further disassembly for maintenance purposes is not provided.
- If you would like to exchange defective components, please contact our customer service.
- Accumulators are not included.

*Information for disassembly in terms of recycling, re-
covery and disposal at the end of the life of the appli-
ance*

- The disassembly of appliances with a gas connection should only be carried out by a licensed gas and water installer.
- The disassembly of appliances with electrical connections should be carried out by a licensed electrician.
- For the recycling and recovery of resources give the appliance to:
 - a communal collection point waste disposal authority,
 - a dedicated disposal company, offering a return system,
 - a resident electric trader, who voluntary withdraws electrical appliances.

EU Product data sheet

Product information for domestic ovens according EU 65-66/2014

	Symbol	Value	Unit
Brand		BOMANN	
Model identification		EBO 7900 IX	
Type of oven		Built-in	
Mass of the appliance	M	25	kg
Number of cavities		1	
Heat source per cavity (electricity or gas)		Electricity	
Volume per cavity	V	55	l
Energy consumption (electricity) required to heat a standardized load in a cavity of an electric heated oven during a cycle in conventional mode per cavity (electric final energy)	$EC_{\text{electric cavity}}$	0.74	kWh/cycle
Energy consumption required to heat a standardized load in a cavity of an electric heated oven during a cycle in fan-forced mode per cavity (electric final energy)	$EC_{\text{electric cavity}}$	-	kWh/cycle
Energy consumption required to heat a standardized load in a gas-fired cavity of an oven during a cycle in conventional mode per cavity (gas final energy)	$EC_{\text{gas cavity}}$	-	MJ/cycle kWh/cycle (1)
Energy consumption required to heat a standardized load in a gas-fired cavity of an oven during a cycle in fan-forced mode per cavity (gas final energy)	$EC_{\text{gas cavity}}$	-	MJ/cycle kWh/cycle
Energy Efficiency Index per cavity	EEl_{cavity}	94.9	
Energy efficiency class (2)		A	

(1) 1 kWh/cycle = 3.6 MJ/cycle

(2) A+++ (highest efficiency) to D (lowest efficiency)

BOMANN®
C. Bomann GmbH
www.bomann-germany.de
Made in P.R.C.

Stand 02/19