

## TELESCOPIC RAILS

Telescopic rails enable you to pull out the wire grid and the tray easily.

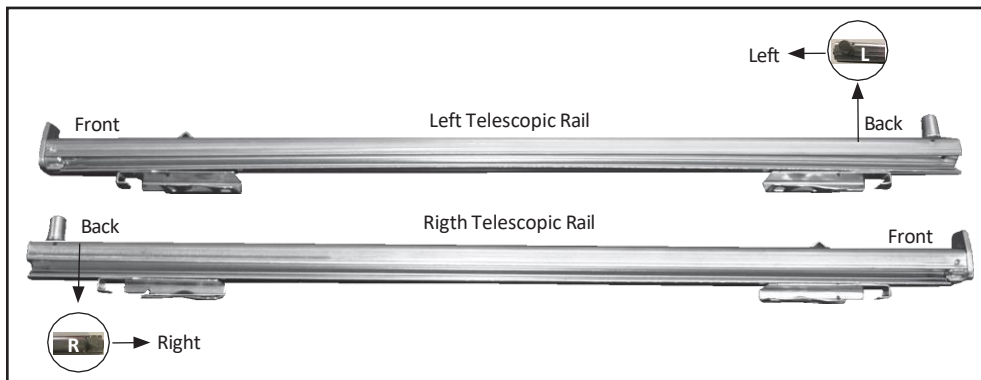


Figure-1

The telescopic rails which you have purchased as an accessory, can be mounted easily on to the side wire racks by using the fixing clips which are located on the telescopic rails. (Ref. Figure-2). There are right (R) and left (L) rails therefore please make sure which rail is going to be mounted to which side of the wire rack. (Ref. Figure-1)

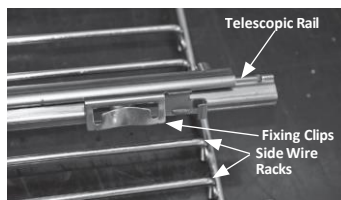


Figure-2

Mounting Suggestions; side wire racks have to be completely dismantled from the oven, than mount the rails on to the side wire racks on a flat surface. Please mount the telescopic rails to the above wire on the shelf. The rails can be easily mounted and dismantled. After arranging the positions of the right and left telescopic rails, push them until the fixing clips are fully mounted on the shelf wire. (Ref. Figure-3)



Figure-3

Make sure that the fixing clips are fully mounted by checking side wire racks from back side. (Ref. Figure-4)

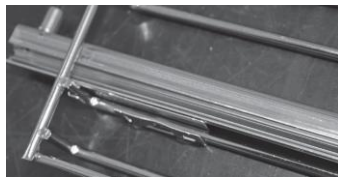


Figure-4

After mounting process is finished please remount the side wire racks in to the oven.

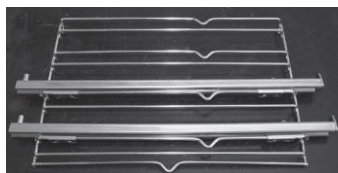


Figure-5