

BOMANN VS 7316.1

Dieses Produkt enthält eine Lichtquelle der Energieeffizienzklasse G.


Leuchtmittel wechseln

△ ACHTUNG:

Die Abdeckung der LED-Beleuchtung **NICHT** entfernen. Reparaturen an dieser Beleuchtung dürfen nur durch einen autorisierten Fachmann oder dem Kundenservice (siehe Bedienungsanleitung „*Garantie / Kundenservice*“) durchgeführt werden.

HINWEISE FÜR DEN AUTORISIERTEN FACHMANN!

Lampendaten: LED max. 2 W, 220~240 V

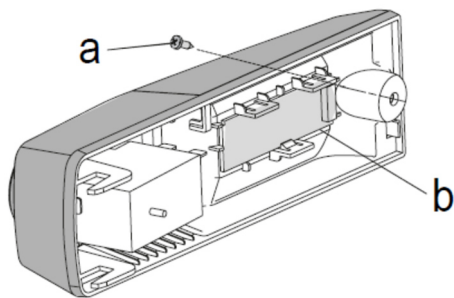

- Gerät von der Stromversorgung trennen!
- Schraube (a) lösen und Lichtabdeckung entnehmen.
- Defektes Leuchtmittel (b) ersetzen.
- Lichtabdeckung ordnungsgemäß einsetzen und befestigen.
- Gerät wieder in Betrieb nehmen.

BOMANN VS 7316.1

This product contains a light source of energy efficiency class G.


Changing the light

△ CAUTION:

Do **NOT** remove the cover of the light. The LED light may be replaced / repaired in case of failure / defect only by an authorized specialist.

NOTES FOR THE AUTHORIZED SPECIALIST!

Light data: LED max. 2 W, 220~240 V

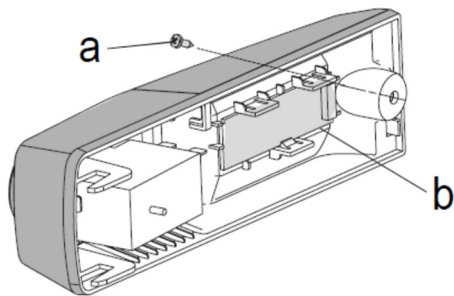

- Disconnect the appliance from the power supply!
- Loosen the screw (a) and remove the light cover.
- Replace the defective light (b).
- Insert and fasten the light cover correctly.
- Put the appliance back into operation.