

BOMANN SBS 7323.1

Dieses Produkt enthält eine Lichtquelle der Energieeffizienzklasse G.


Leuchtmittel wechseln

⚠ ACHTUNG:

Die Abdeckung der LED-Beleuchtung **NICHT** entfernen. Reparaturen an dieser Beleuchtung dürfen nur durch einen autorisierten Fachmann oder dem Kundenservice (siehe Bedienungsanleitung „*Garantie / Kundenservice*“) durchgeführt werden.

HINWEISE FÜR DEN AUTORISIERTEN FACHMANN!

Lampendaten: 2W, DC12V

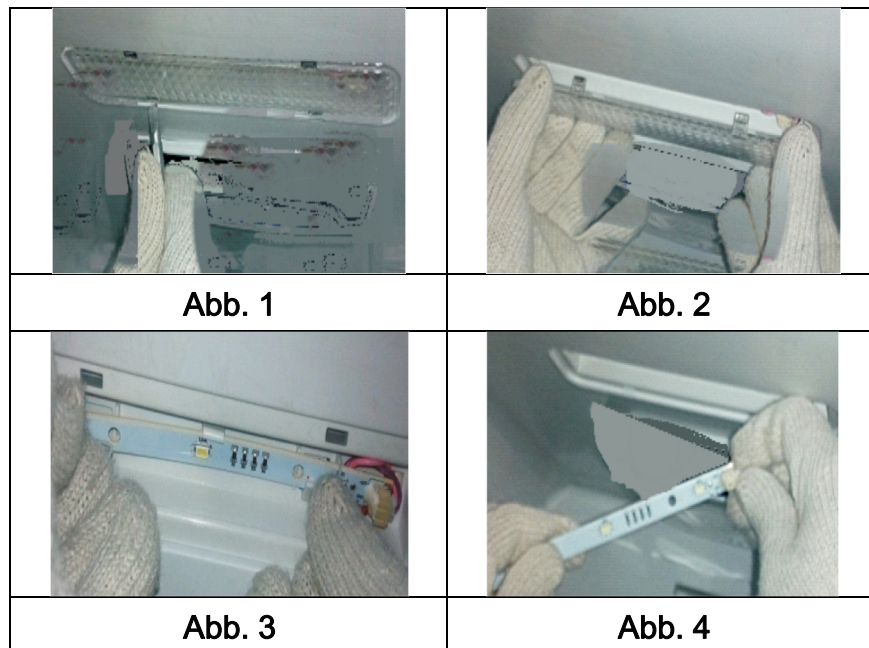

- Gerät von der Stromversorgung trennen!
- Lichtabdeckung mit einem Schraubendreher lösen (*Abb. 1*).
- Lichtabdeckung entnehmen (*Abb. 2*).
- Leuchtmittel lösen (*Abb. 3*).
- Steckverbindung trennen (*Abb. 4*).
- Defektes Leuchtmittel ersetzen.
- Lichtabdeckung ordnungsgemäß einsetzen.
- Gerät wieder in Betrieb nehmen.

BOMANN SBS 7323.1

This product contains a light source of energy efficiency class G.


Changing the light

⚠ CAUTION:

Do NOT remove the cover of the light. The LED light may be replaced / repaired in case of failure / defect only by an authorized specialist.

NOTES FOR THE AUTHORIZED SPECIALIST!

Light data: 2W, DC12V

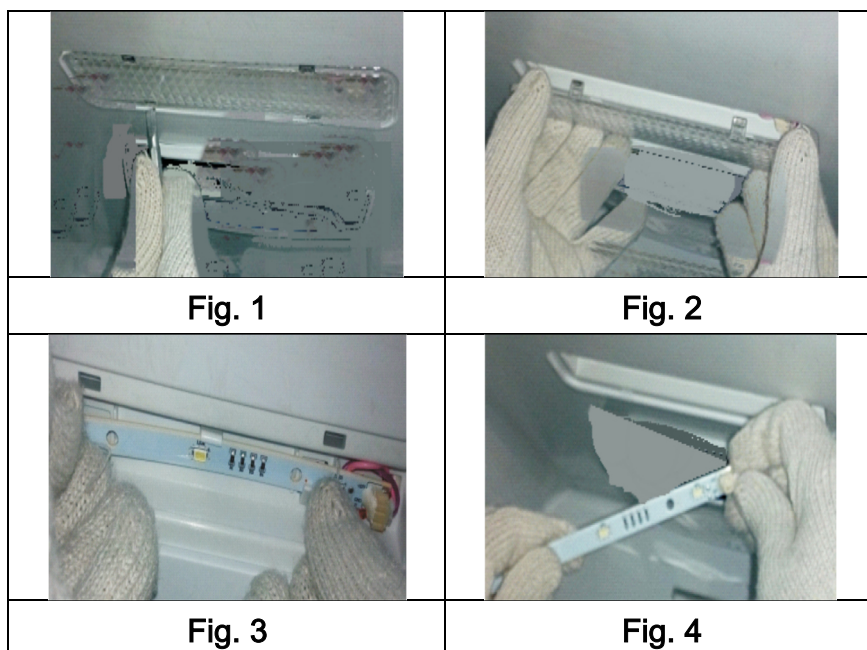

- Disconnect the appliance from the power supply!
- Loosen the light cover with a screwdriver (*Fig. 1*).
- Remove the light cover (*Fig. 2*).
- Loosen the light (*Fig. 3*).
- Disconnect the plug connection (*Fig. 4*).
- Replace the defective light.
- Insert the light cover correctly.
- Put the appliance back into operation.